

# Quick Start Guide

## C-7070 Wide Zoom

### Start Here


It is strongly recommended that you follow these step-by-step instructions to set up and quickly begin using your new Digital Camera.

STEP

1

## UNPACK THE BOX CONTENTS

Please gather the items shown in the illustration. You'll need these to complete the procedures that follow.

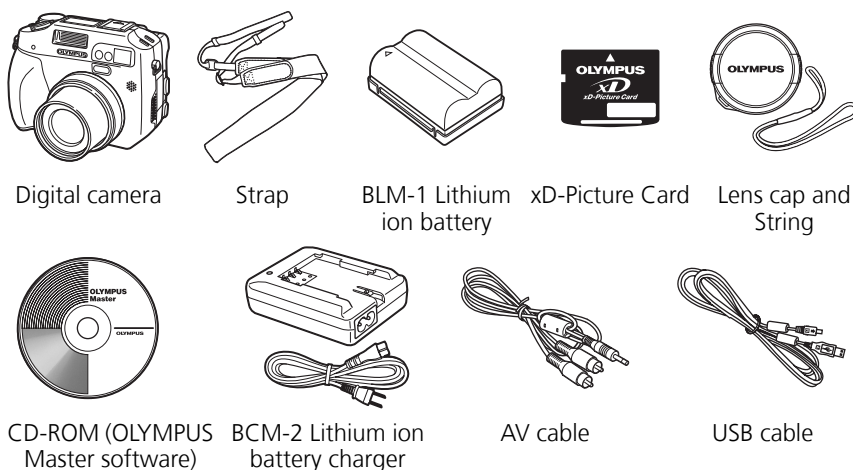

The following items are also included in the Digital Camera package: Basic Manual, warranty card, Advanced Manual on CD-ROM and registration card.

STEP

2

## REVIEW THE DOCUMENTATION

**Quick Start Guide** (this document)  
Getting started with your digital camera.

**Quick Reference Guide** (reverse side of this document)  
Quick guide to using common features and functions.

**Basic Manual** (printed booklet)  
Guide to mastering the basics of taking and viewing pictures.

**Advanced Manual** (CD-ROM)  
Detailed instructions on all camera features and functions.


**Software Installation Guide** (separate document on OLYMPUS Master CD-ROM)  
Detailed instructions on installing the OLYMPUS Master software.

STEP

3

## CHARGE AND INSERT THE BATTERY

- Remove the protection cap from the battery and insert the battery into the charger. The indicator light turns green when the battery is fully charged (approx. 5 hours).
- Make sure the camera is off.
- Slide the battery compartment lock on the bottom of the camera and open the battery compartment cover. Insert the battery until the battery lock knob clicks into place.
- Close the cover and lock.

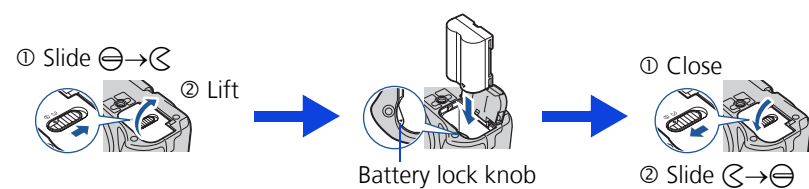


STEP

4

## INSERT THE xD-PICTURE CARD

- Open the card cover.
- Insert the xD-Picture Card into the slot as shown.
- Close the cover.

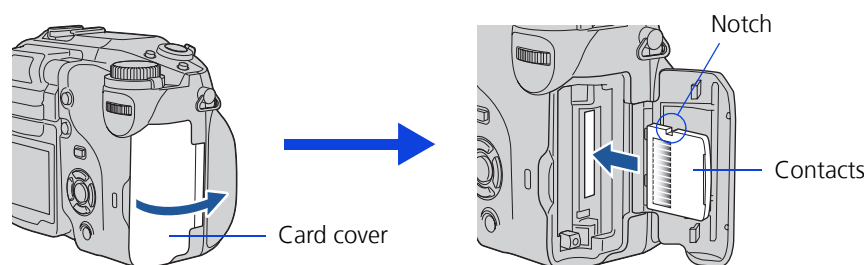


STEP

5

## ATTACH THE LENS CAP AND STRAP

Attach the lens cap string and camera strap as shown. Attaching the strap to the camera makes it easier to handle.

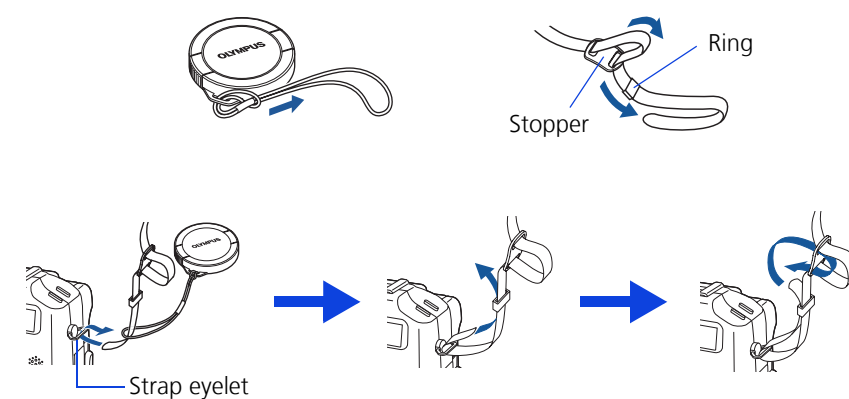

STEP


6

## TURN ON THE CAMERA

- Remove the lens cap.
- Pull out the monitor and rotate it.

- Set the mode dial to **P** and turn the power switch to **ON**. The lens extends and the monitor turns on.

Note: After use, turn the power switch to **OFF**. The lens retracts and the monitor turns off. Return the monitor to its original position.

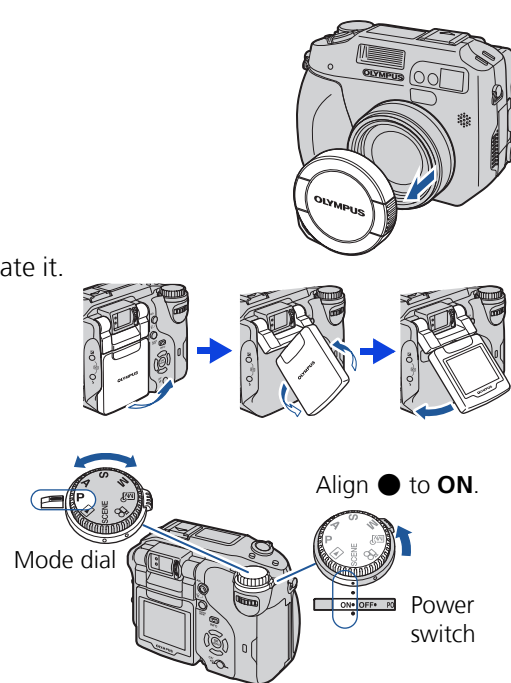


STEP

7

## SET THE DATE AND TIME

- With the camera on, press **MODE MENU**.
- Use the arrow pad to select **[MODE MENU]** on the monitor.
- Select the **[SETUP]** tab, and press **OK**. Select **[DATE]**, and press **OK**.
- Select the date format and press **OK**.
- Use **Left/Right** to set each item and press **OK** to move to the next item.
- Press **OK** when you have finished entering the date and time.

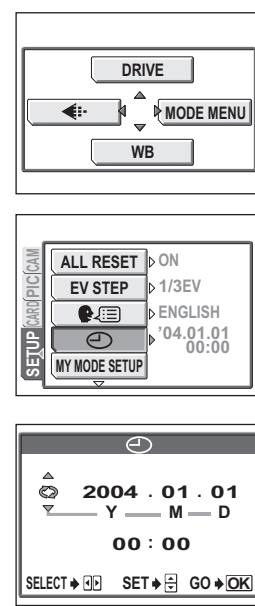


STEP

8

## TAKING A PICTURE

- Place the AF target mark on your subject using the monitor or viewfinder.
- Press the shutter button halfway to lock the focus and exposure, then press the shutter button completely to take the picture.

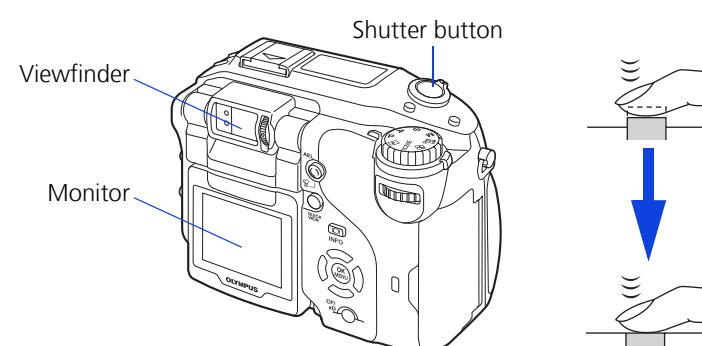


STEP

9

## REVIEWING A PICTURE

- Press the **QUICK VIEW** button. The last picture taken is displayed.
- Use the arrow pad or control dial to display the picture you want.
- Press the **QUICK VIEW** button again when you are ready to take another picture.

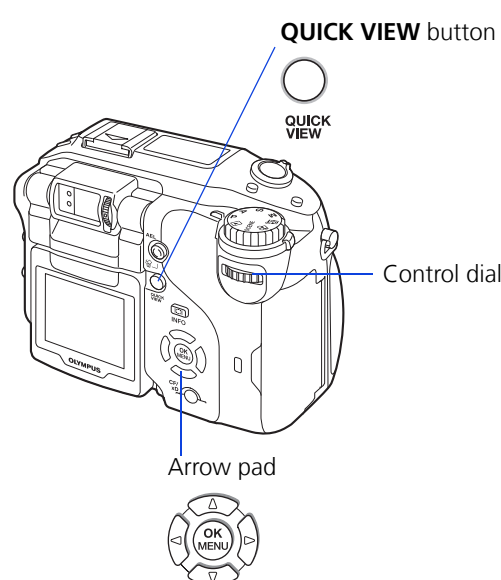


STEP

10

## ERASING A PICTURE

- Display the picture you want to erase and press the **ERASE** button.
- Select **[YES]** and press **OK**.

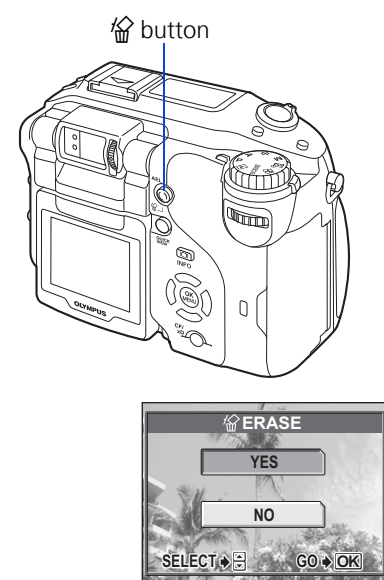


STEP

11

## CONNECTING THE CAMERA TO A COMPUTER

- With the camera on, press **MODE MENU**.
- Select **[MODE MENU]**. Select the **[SETUP]** tab, and press **OK**.
- Scroll down several pages. Select **[USB]**, and press **OK**. Select **[PC]**, and press **OK**.
- Turn the camera off.
- Connect the camera to the computer using the USB cable (included).

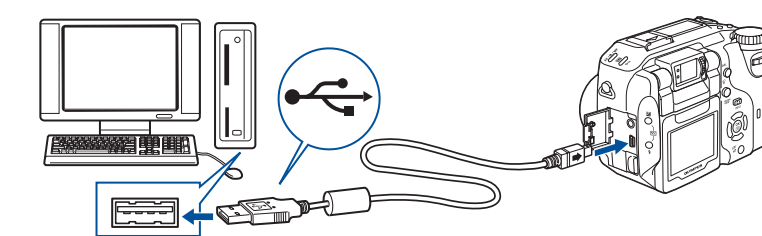

- Set the mode dial to **P** and turn the power switch to **ON**.

STEP

12

## VERIFY CAMERA CONNECTION


### WINDOWS:

- From the desktop ("Start" menu for XP), open "My Computer".

- Verify that the "Removable Disk" icon representing the camera is displayed.

### MACINTOSH:

- Verify that the "NO\_NAME" icon representing the camera is displayed.

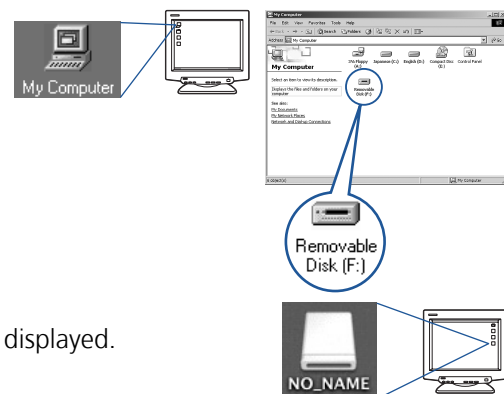

• The above steps confirm that the camera has been installed correctly. You can transfer your images immediately using the standard drag and drop procedure, or enhance your experience using OLYMPUS Master software (included).

STEP

13

## ABOUT THE CD-ROM DISCS



Now that you've mastered the basic functionality of your new Olympus Digital Camera, you are ready to begin exploring the possibilities that digital photography brings to your computer. Activities such as photo editing, printing and much more are only steps away!

### CD-ROM1

**OLYMPUS Master software:** Download pictures from the camera, view, organize, retouch, e-mail and print your digital photos and movies and more! This CD also contains the complete software users manual in Adobe Acrobat (PDF) format.

### CD-ROM2

**Advanced Manual:** A complete camera guide in Adobe Acrobat (PDF) format. This manual contains detailed instructions on the camera's features and functions which are not covered in the printed Basic Manual or Quick Start/Quick Reference Guides.

STEP


14

## INSTALLING THE CAMERA SOFTWARE

- Insert the OLYMPUS Master CD-ROM into your computer's CD-ROM drive.
- For Windows:  
Click the "OLYMPUS Master" button in the "Setup" window.

For Macintosh:  
Double-click the "Installer" icon.

- Follow the on-screen instructions. For more details, click "Please Read First".

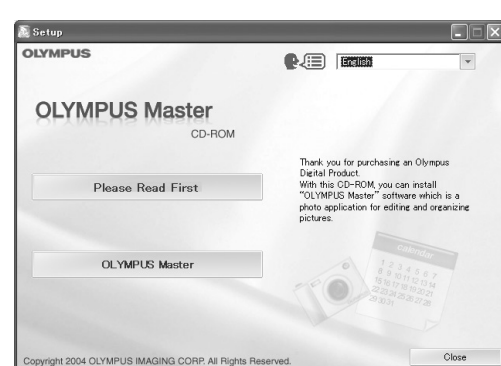

Please refer to the Quick Reference Guide on the reverse side of this sheet to familiarize yourself with the commonly used features and functions of your new Olympus Digital Camera.





# Quick Reference Guide

## C-7070 Wide Zoom

### INDEX


1. Camera Diagram and Controls
2. Shooting Modes
3. Using the Zoom
4. How to Use the Autofocus
5. Flash Modes
6. Image Quality Modes
7. Recording a Movie
8. Viewing Pictures/Movies on a TV
9. How to Erase All Pictures
10. E-mailing a Picture
11. Printing a Picture

## CAMERA DIAGRAM AND CONTROLS

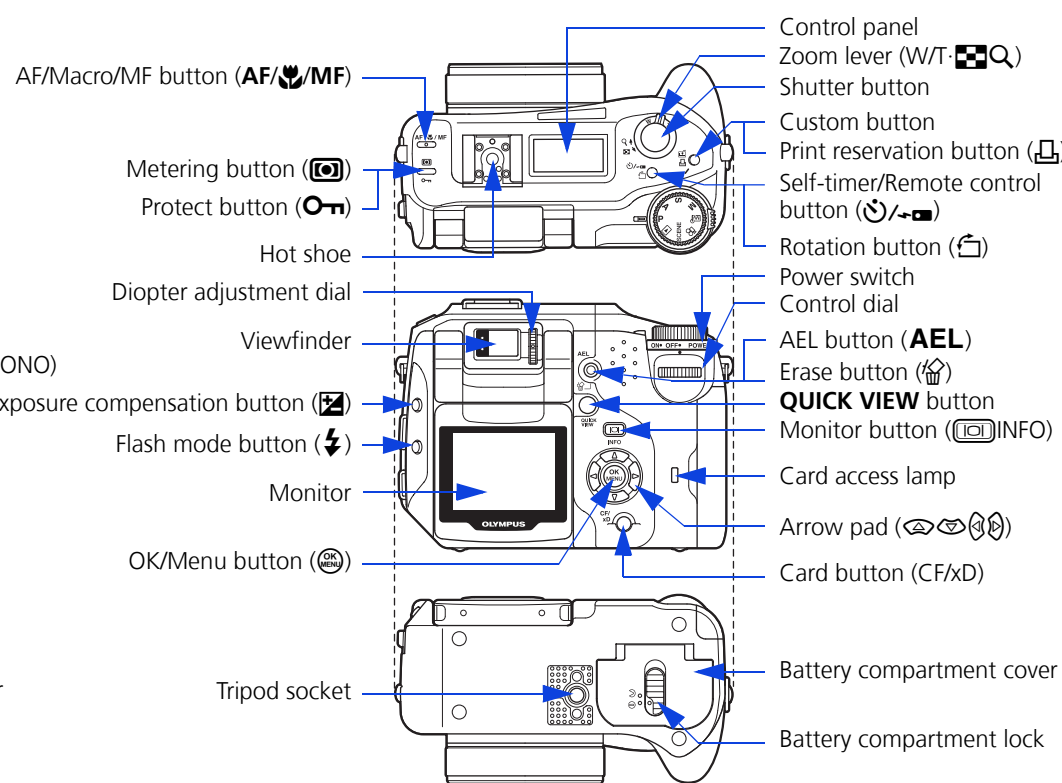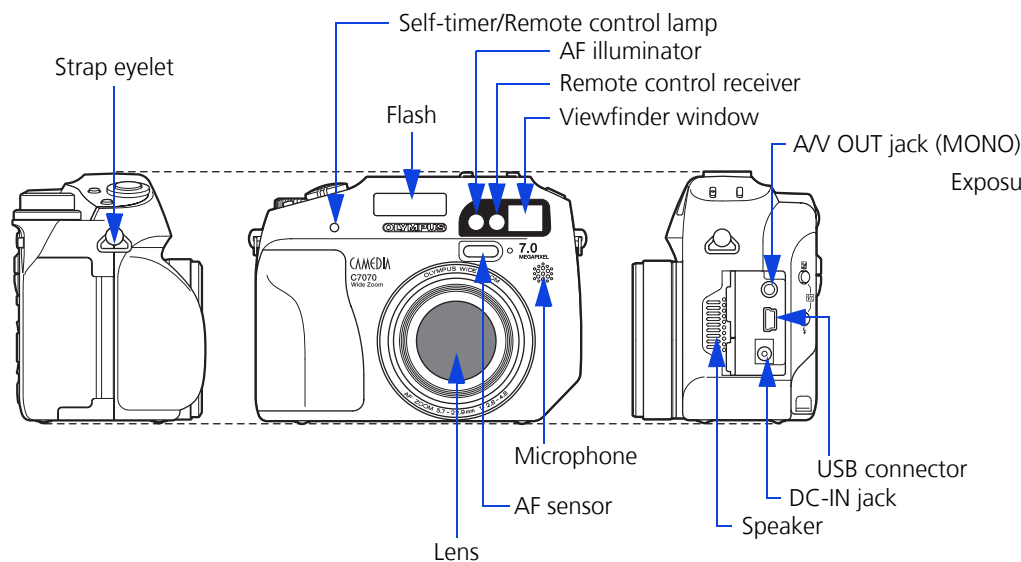


## SHOOTING MODES

**Shooting modes:**  
Set the mode dial to one of these positions to take pictures or movies.

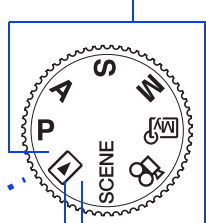

**Playback mode:**  
Set the mode dial to this position to view pictures or movies.

Turn the mode dial to the mode you want.

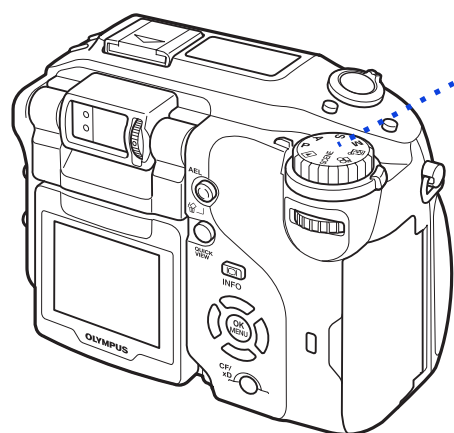


### Shooting Mode Descriptions

- P** • **Program** - The camera sets the optimal settings automatically.
- A** • **Aperture priority** - Lets you set the aperture, giving you control over the depth of field. The camera sets the other settings.
- S** • **Shutter priority** - Lets you set the shutter speed, giving you the control to capture moving subjects. The camera sets the other settings.
- M** • **Manual** - Lets you set both the aperture and shutter speed giving you more creative control over your pictures.
- My modes** • **My modes** - Lets you use your own customized settings when taking pictures.
- Movie** • **Movie** - Lets you record movies.
- SCENE** • **Scene modes** - Lets you select the optimal settings for specific situations. You can select from: Portrait, Sports, Landscape+Portrait, Landscape, Night Scene, Underwater Wide, and Underwater Macro.

Note: You can change the mode dial when the camera is on or off.

## USING THE ZOOM


This camera features a zoom lens, letting you get closer to the action or capture wide-angle shots.

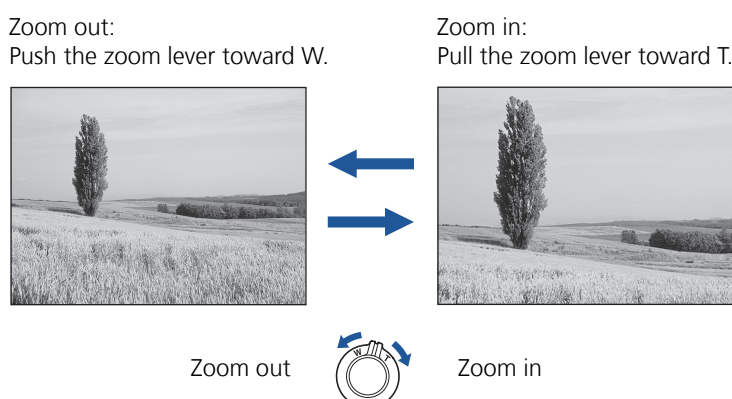

- Push toward W to zoom out and get more into the picture.
- Pull toward T to zoom in and get closer to the action.

## HOW TO USE THE AUTOFOCUS

**a.** While positioning the AF target over the subject, press and hold the shutter button halfway.

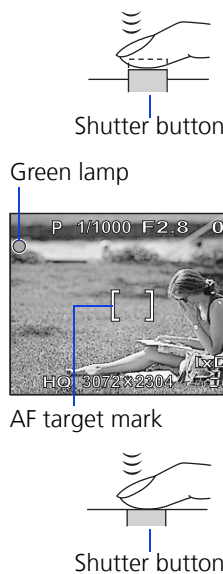

**b.** The green lamp, which indicates the focus and exposure are locked, remains lit as long as the shutter button is kept depressed halfway.


**c.** Press the shutter button completely to take the picture.

## FLASH MODES

This camera features multiple flash modes. You can select the appropriate flash mode to the suit the situation. The icons that are displayed on the monitor and control panel are shown below.

- (None)
- RED-EYE REDUCTION** - Reduces the incidence of red-eye by emitting pre-flashes to shrink pupil size before taking the picture.
- FILL-IN FLASH** - The flash always fires. Suitable for shooting backlit subjects.
- SLOW SYNCHRONIZATION** - Allows you to use the flash with a slow shutter speed.
- FLASH OFF** - The flash is turned off. Suitable for when flash photography is not permitted.

- a.** Set the mode dial to any mode other than **SCENE** or **Movie**.
- b.** Press the **FLASH** button.
- c.** Turn the control dial until the desired flash mode is selected. Press the **FLASH** button again.

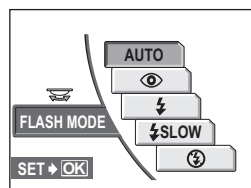


## IMAGE QUALITY MODES

Your camera is equipped with multiple image quality modes, which determine the quality and image size of the pictures you take. Below is a general description of the commonly used modes. For a detailed description of all quality modes, refer to the Advanced Manual included on the CD-ROM.

Application	Compression	Uncompressed	Image becomes clearer	
			Low compression	High compression
Select according to print size	For small-sized prints and websites	TIFF	SHQ	HQ
			SQ1	SQ1
			SQ2	NORMAL
			HQ	NORMAL

- a.** With the mode dial set to any mode other than **SCENE**, press **MODE MENU**.
- b.** Use the arrow pad to select **[MODE MENU]** on the monitor.
- c.** Select the record mode. Use the arrow pad and **OK** to make further settings.

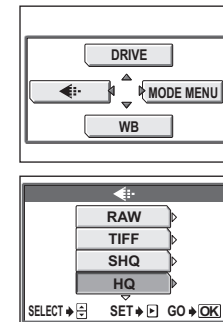

## RECORDING A MOVIE

**a.** Set the mode dial to **Movie**.

**b.** Press the shutter button to start recording (video and audio).




**c.** Press the shutter button again to stop.

Note: You can use features such as the digital and optical zooms while recording; however, you need to set the record sound function off to use the optical zoom. See the Advanced Manual to learn more about these settings.

## VIEWING PICTURES/MOVIES ON A TV

**a.** Make sure that the camera and TV are off. Connect the camera to the TV using the AV cable (included).

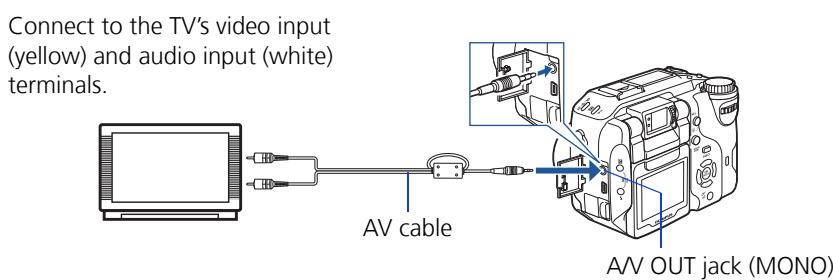

**b.** Turn on the TV and set to "video input".


**c.** Set the mode dial to **Movie** and turn on the camera. Use the arrow pad to display the picture you want.

Note: If the pictures are not displayed, consult your TV manual to set up the video source.

## HOW TO ERASE ALL PICTURES

**WARNING - PERFORMING THESE STEPS WILL DELETE ALL PICTURES STORED IN YOUR CAMERA!**

- a.** Set the mode dial to **Movie**, then press **MODE MENU**.
- b.** Use the arrow pad to select **[MODE MENU]** on the monitor.
- c.** Select the **[CARD]** tab, and press **OK**. Select **[ALL ERASE]**, and press **OK**.
- d.** Select **[YES]** and press **OK**.

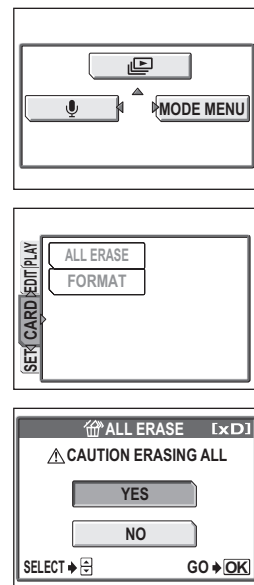

## E-MAILING A PICTURE

Using the OLYMPUS Master software (included), you can share your pictures with others by using the built-in e-mail feature.

After installing OLYMPUS Master, open the program and click "Browse Images". From the "Browse Images" window, select the picture(s) you want to send and click the "E-mail" tool button.

At this time, you can resize your pictures to make them more manageable for e-mail. This helps you stay within the e-mail capacity limitations set by your e-mail provider.

When finished, click the "Launch Mailer" button at the bottom of the window. Your default e-mail program will open, and the selected picture(s) will automatically be attached to a new message.

## PRINTING A PICTURE

Using the OLYMPUS Master software (included), you can make prints of your pictures using your own photo printer.

After installing OLYMPUS Master, open the program and click the "Print Images" icon on the main menu. You can create many different types of prints such as an index print, photos, albums, or calendars. Simply select the image(s) and add them to one of the many layouts within OLYMPUS Master. For detailed instructions, please refer to the "Help" menu in the software. You can also order prints online using the "Print Online" feature in OLYMPUS Master.

Alternatively, you can print your pictures by connecting your PictBridge\*-compatible camera directly to a PictBridge\*-compatible printer, such as the Olympus P-10 Digital Photo Printer. This permits fast, easy printing without using a computer.

\* For detailed instructions on using PictBridge, please refer to your camera's Advanced Manual included in digital format on the CD-ROM.

## CONTACT INFORMATION

### OLYMPUS IMAGING AMERICA INC.

Two Corporate Center Drive, PO Box 9058, Melville, NY 11747-9058

**Technical Support (USA):**  
24/7 online automated help: <http://olympusamerica.com/support>  
Phone customer support: 1-888-553-4448 (toll free)

Our phone customer support is available from 8am - 10pm, (Monday to Friday) ET

E-mail: [distec@olympus.com](mailto:distec@olympus.com)  
Olympus software updates can be obtained at: <http://olympus.com/digital>

**OLYMPUS**